

Manual for installation

Radiator relocation kit

CFMOTO X8H.O.
CFMOTO X10
CFORCE850
CFORCE850XC

MP0367 V1 - Radiator relocation kit



Remove the front rack panel



Remove the left back cover of the headlight



Remove the right back cover of the headlight




Remove the clips




Remove the left cover inside panel



Remove the hose. Drain the antifreeze

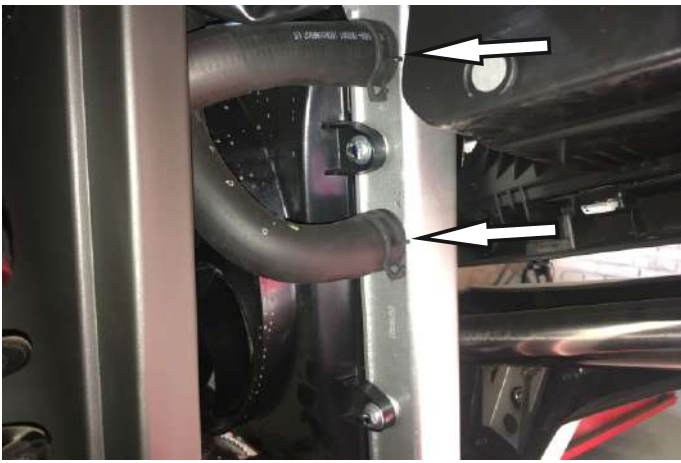

Remove right hoses.

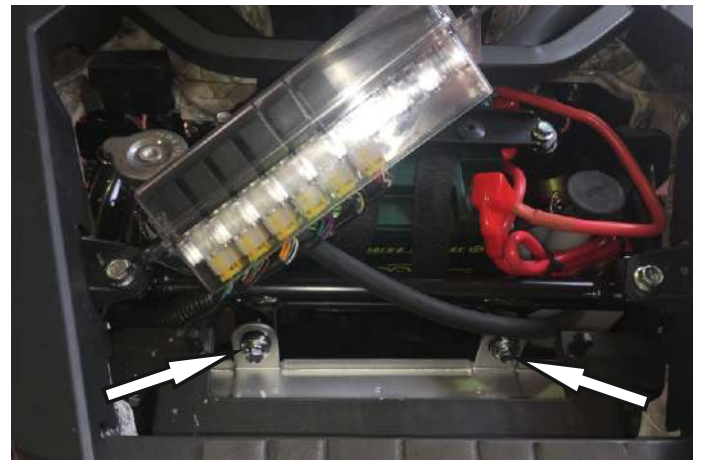

Unscrew the radiator upper mount bolts



Unscrew hose filler neck



Remove hose filler neck



Unplug the temperature sensor connector



Disconnect the connector of the radiator fan




Unscrew the radiator fan



Remove the radiator fan to the left side



The radiator fan. Clean if needed.

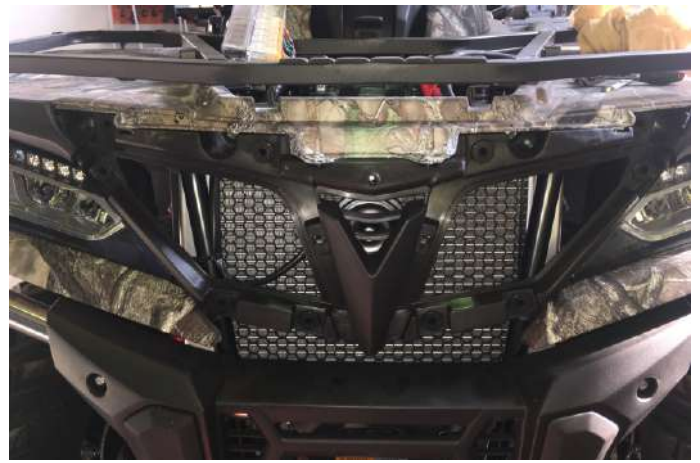

Remove the grille



Unscrew the horn



Remove left headlight and the radiator




Clean the radiator



Install the horn on the frame



Mark a place for the radiator hose in the front rack panel

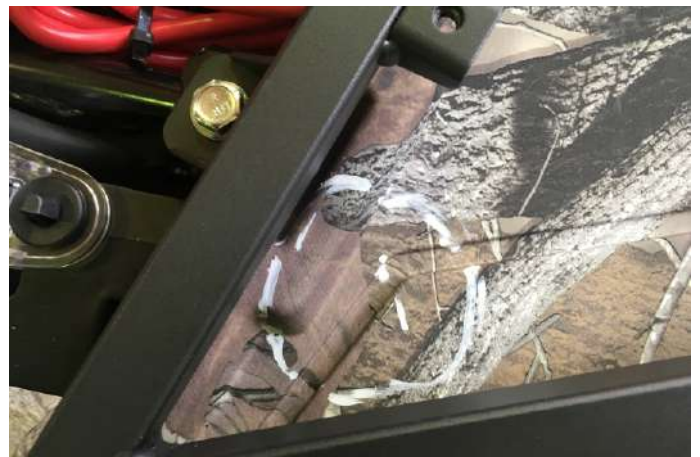


Mark a place for the radiator hose in front panel



Drill a hole in front rack panel d40-50mm




Install the bushing

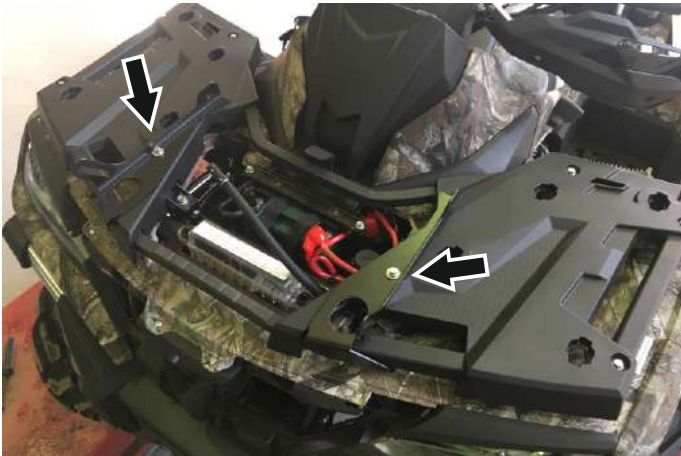


Install the housing brackets of relocation box



Remove the plastic mesh of the radiator

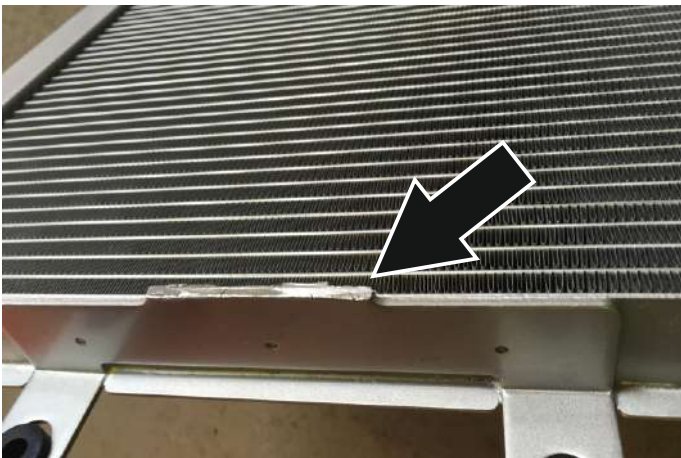

Cut off the horn bracket on the radiator

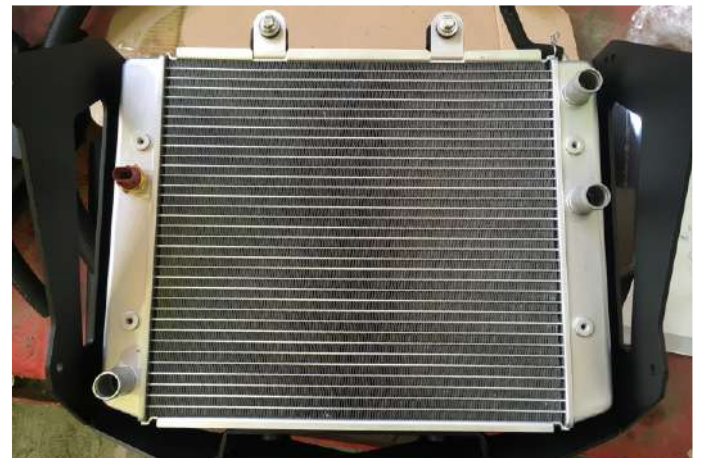

Fix the radiator to the relocation box



Screw the radiator fan



Install and tighten the relocation box



Install the bent hose on the radiator



Install the straight hose



Install the hose filler neck housing



Install the radiator return tube to expansion tank



Plug the temperature sensor connector



Connect the connector of the radiator fan



Install the corner connector



Install upper cover



Install the grille



Pour antifreeze.

Before use:

1. Warm up the engine to the fan ON.
2. Wait for antifreeze time to cool down.
3. Check the hose connections.
4. Check the level of antifreeze.



Have Fun !!!